


2.2 EXTERIOR(1)

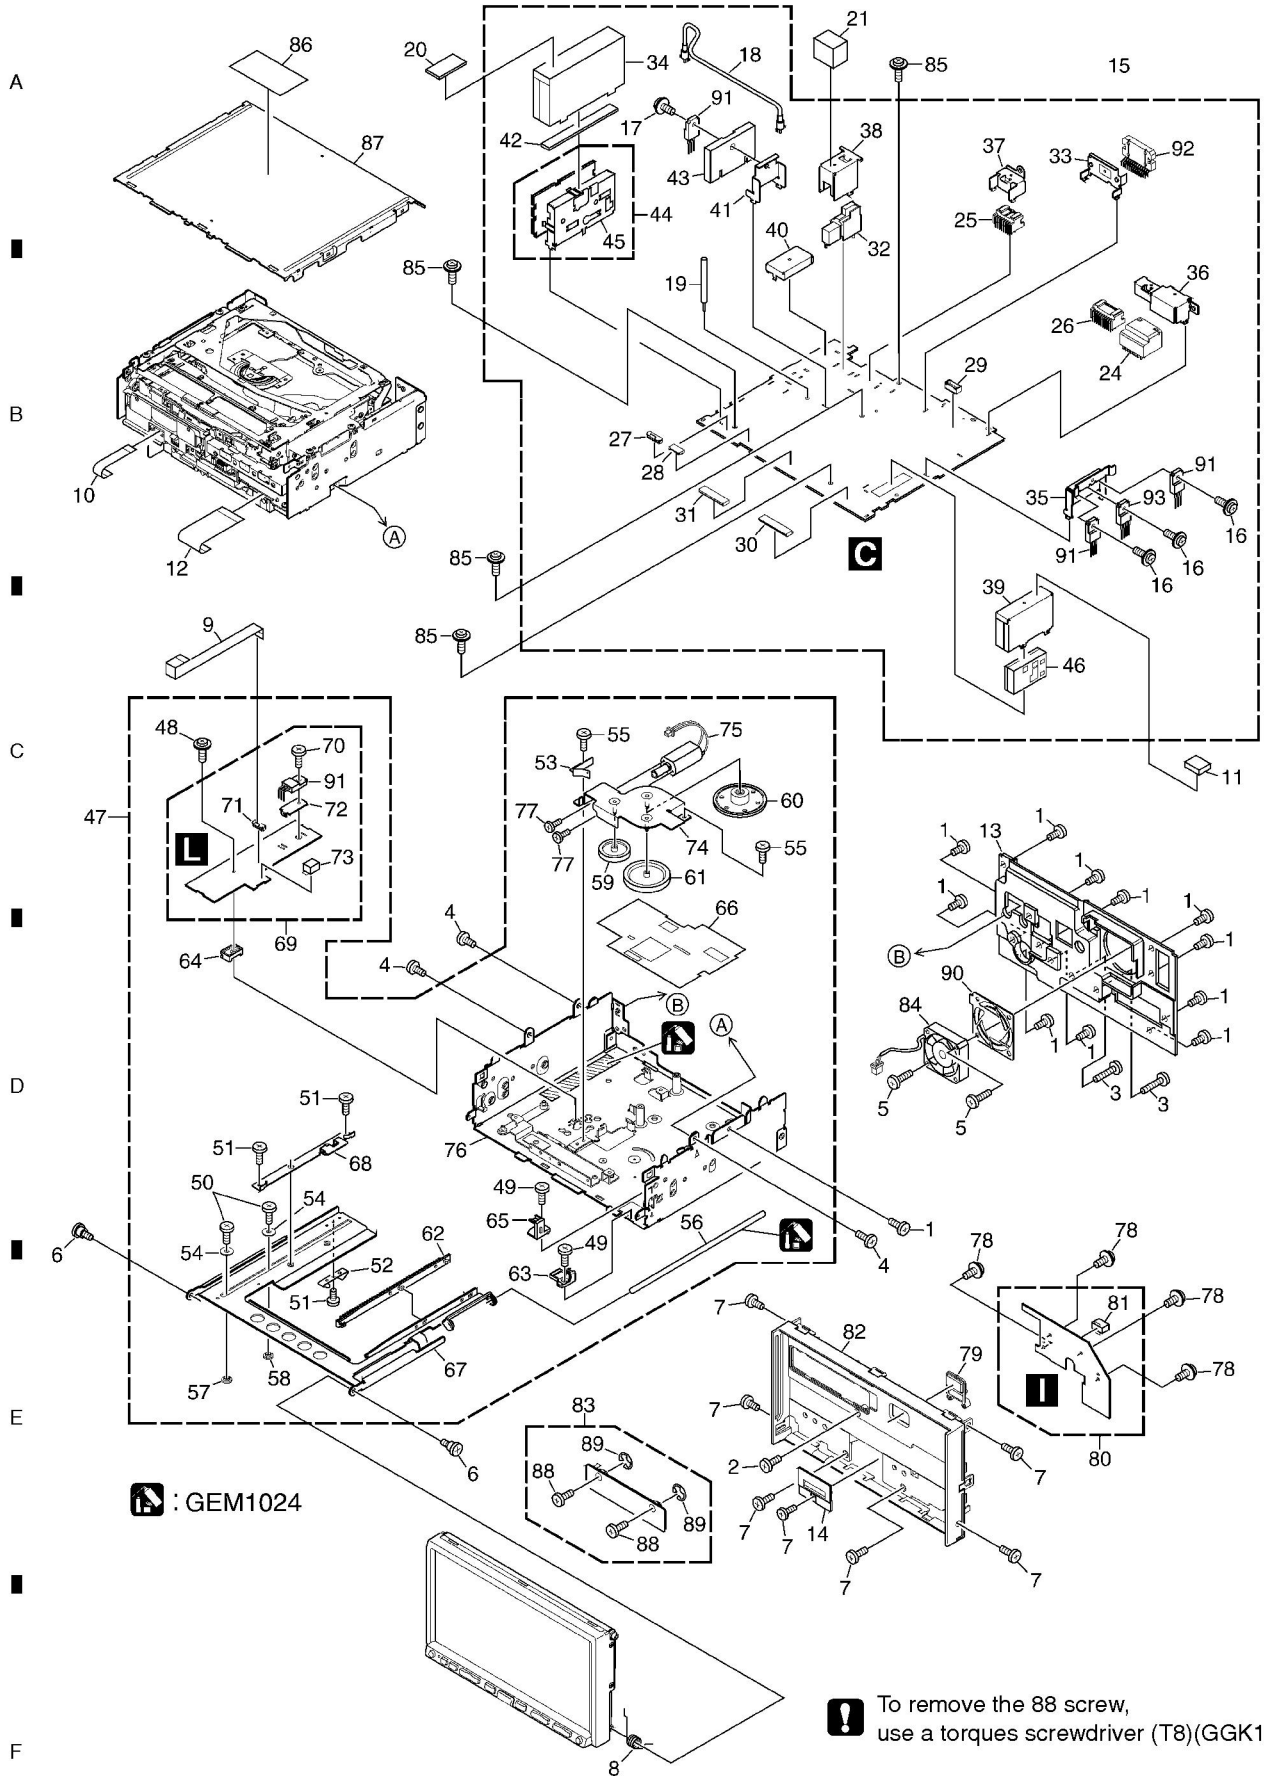

! To remove the 88 screw, use a torques screwdriver (T8)(GGK1068).