


9.5 EXTERIOR(4)

The application position of grease is referred to page 118 and page 119.

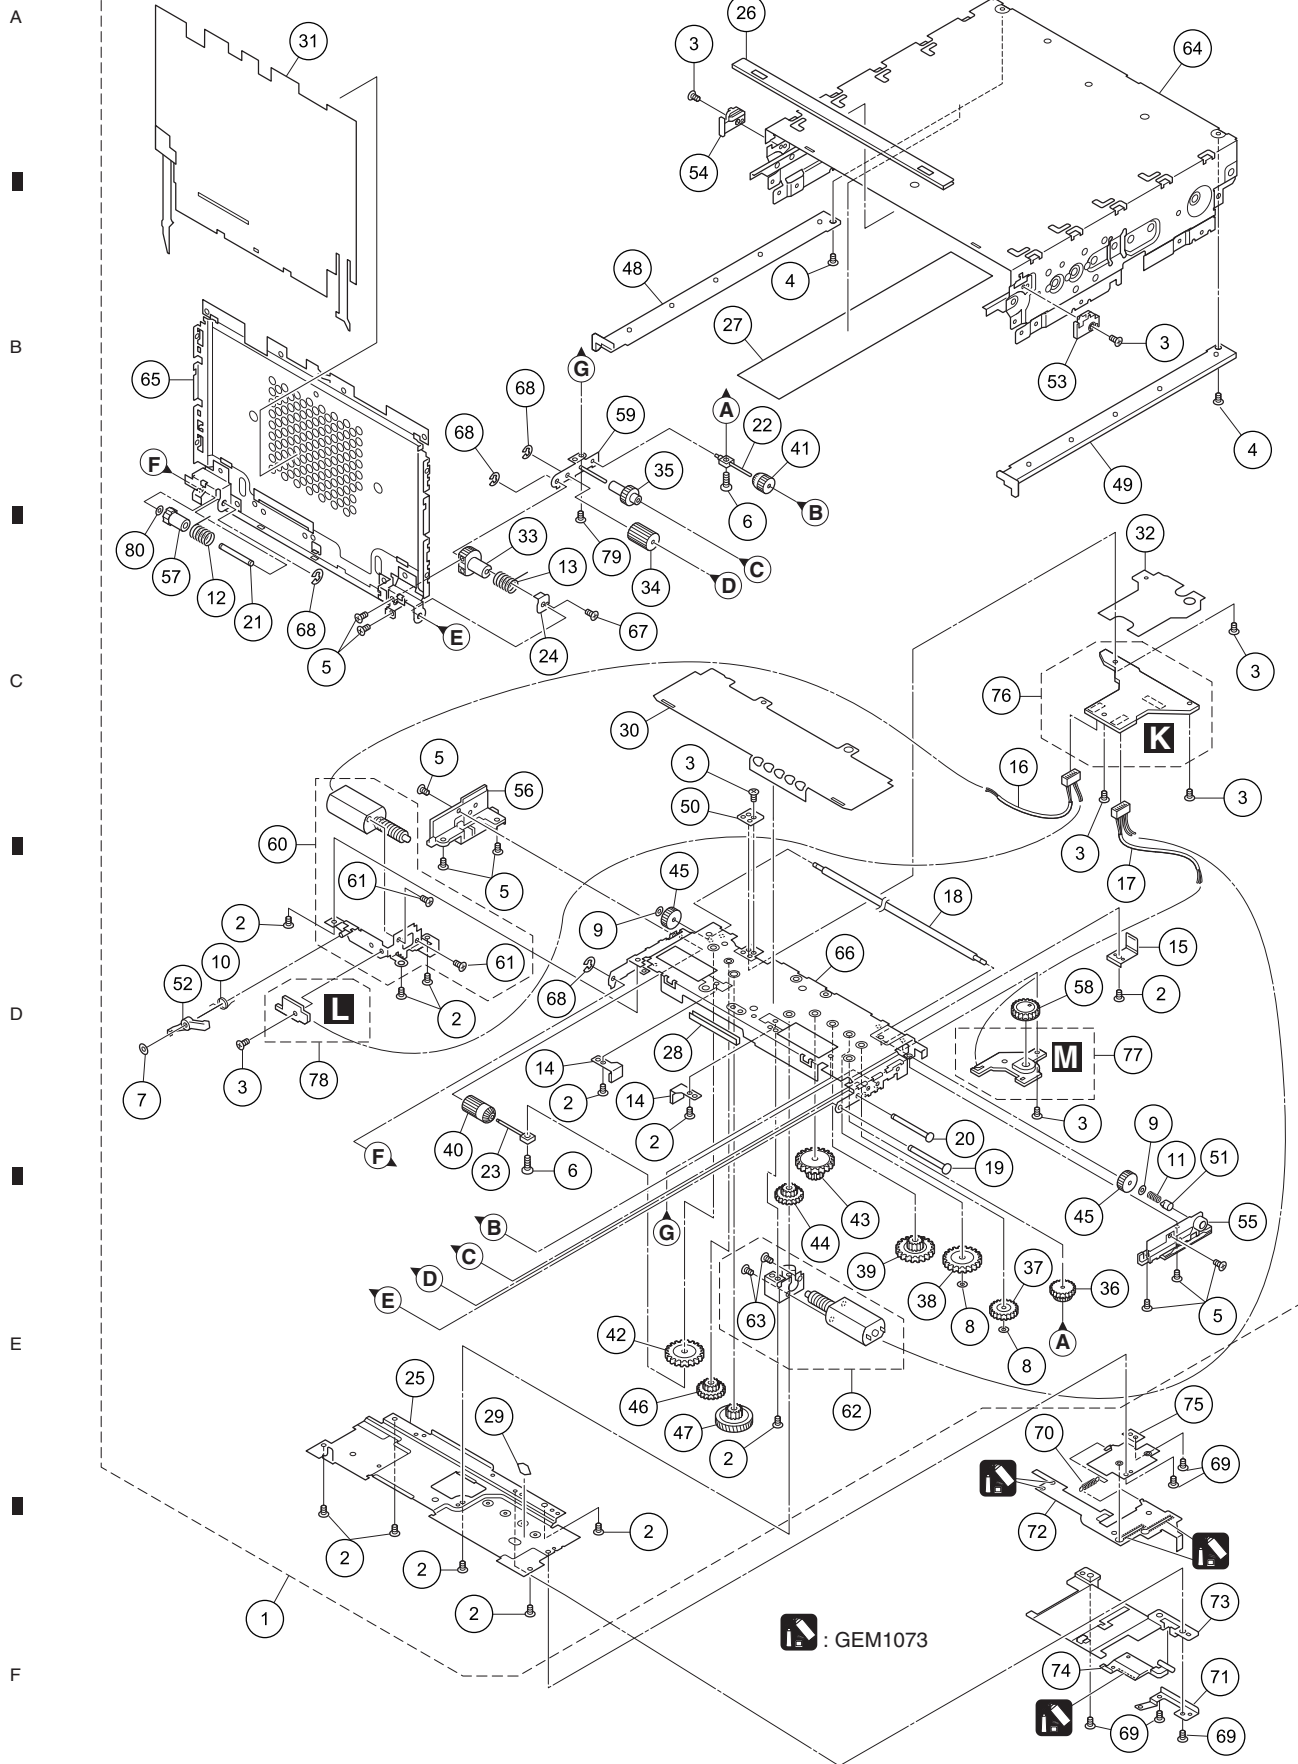

AVH-5200BT/XNEW5