


9.5 EXTERIOR (4)

The application position of grease is referred to page 118 and page 119.

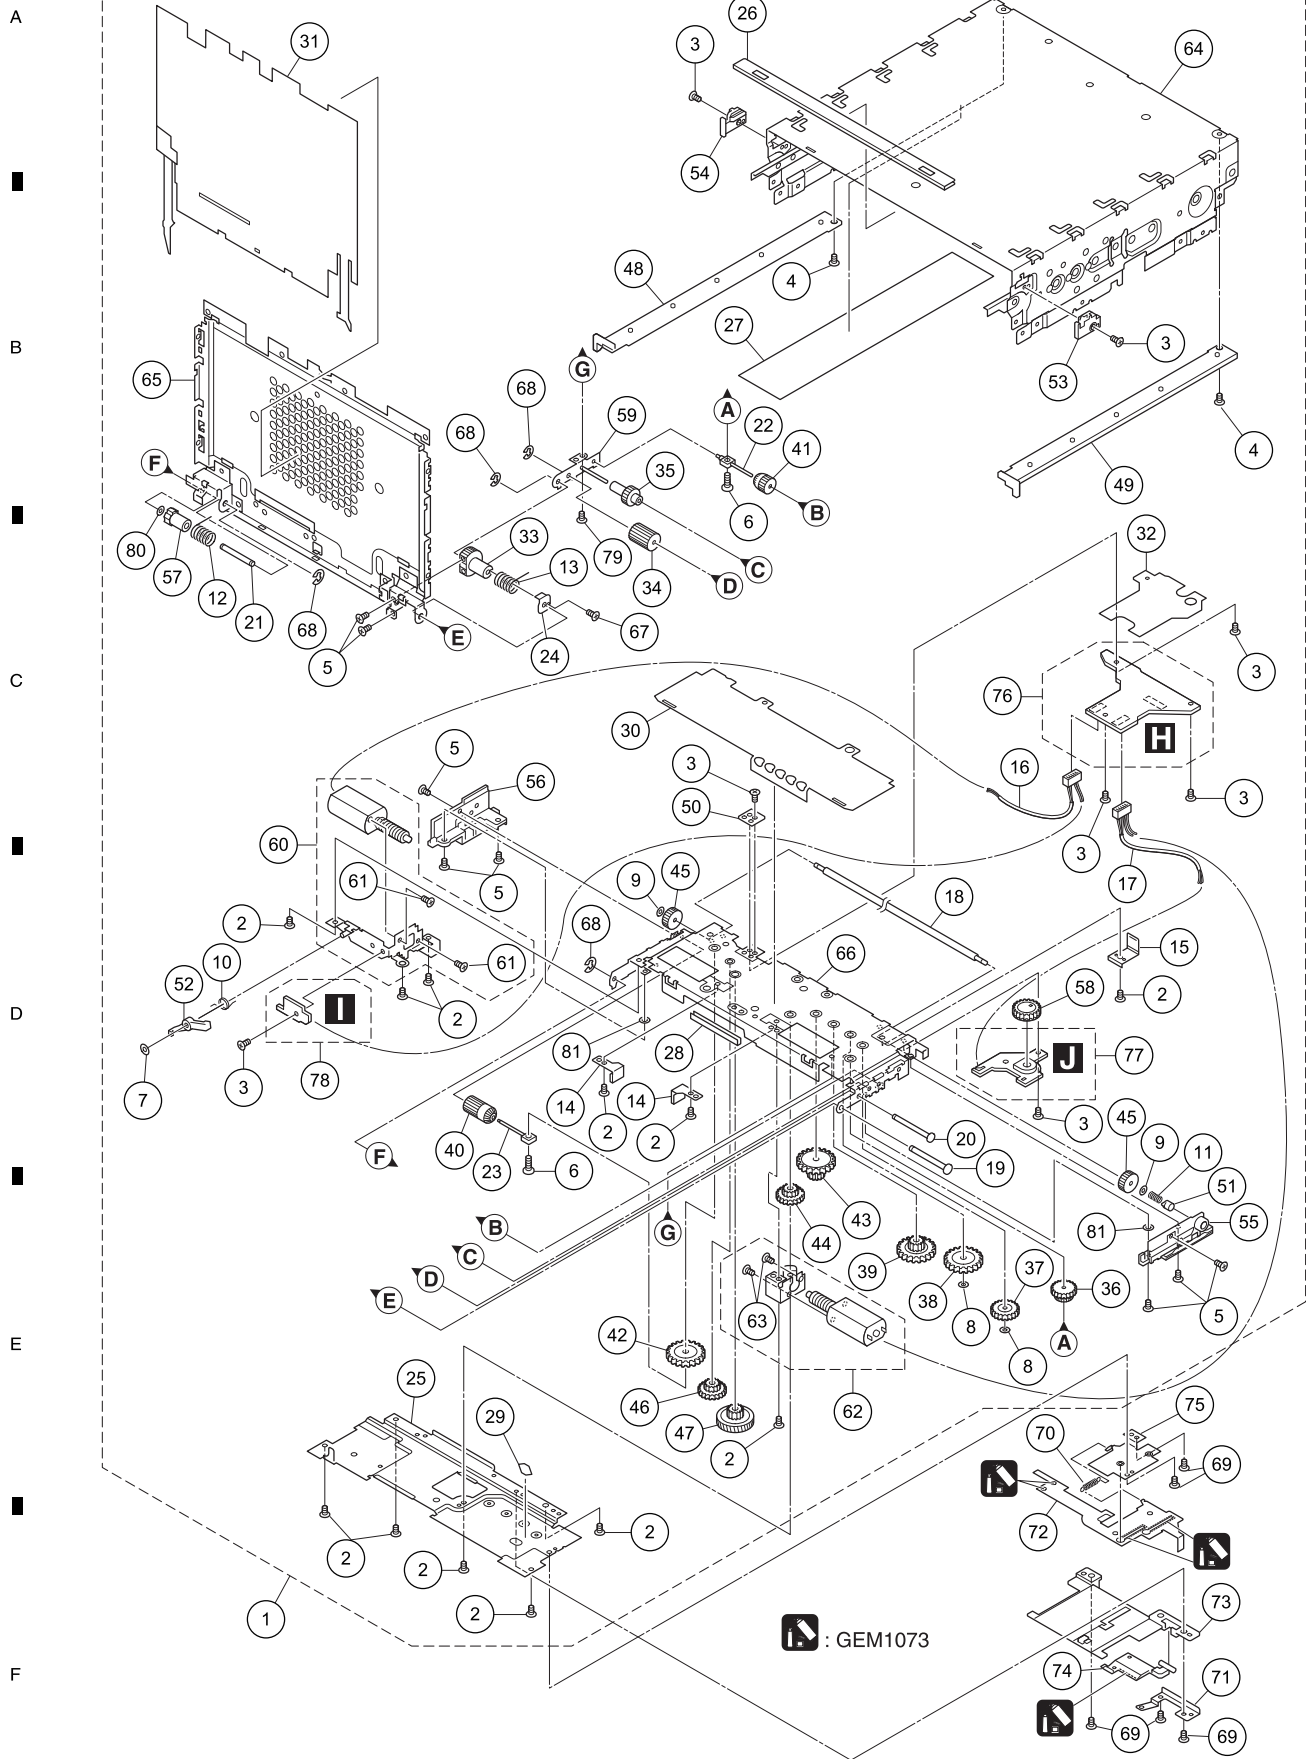

AVH-6300BT/XNEW5