


# 9.5 EXTERIOR(4)

The application position of grease is referred to page 122 and page 123.

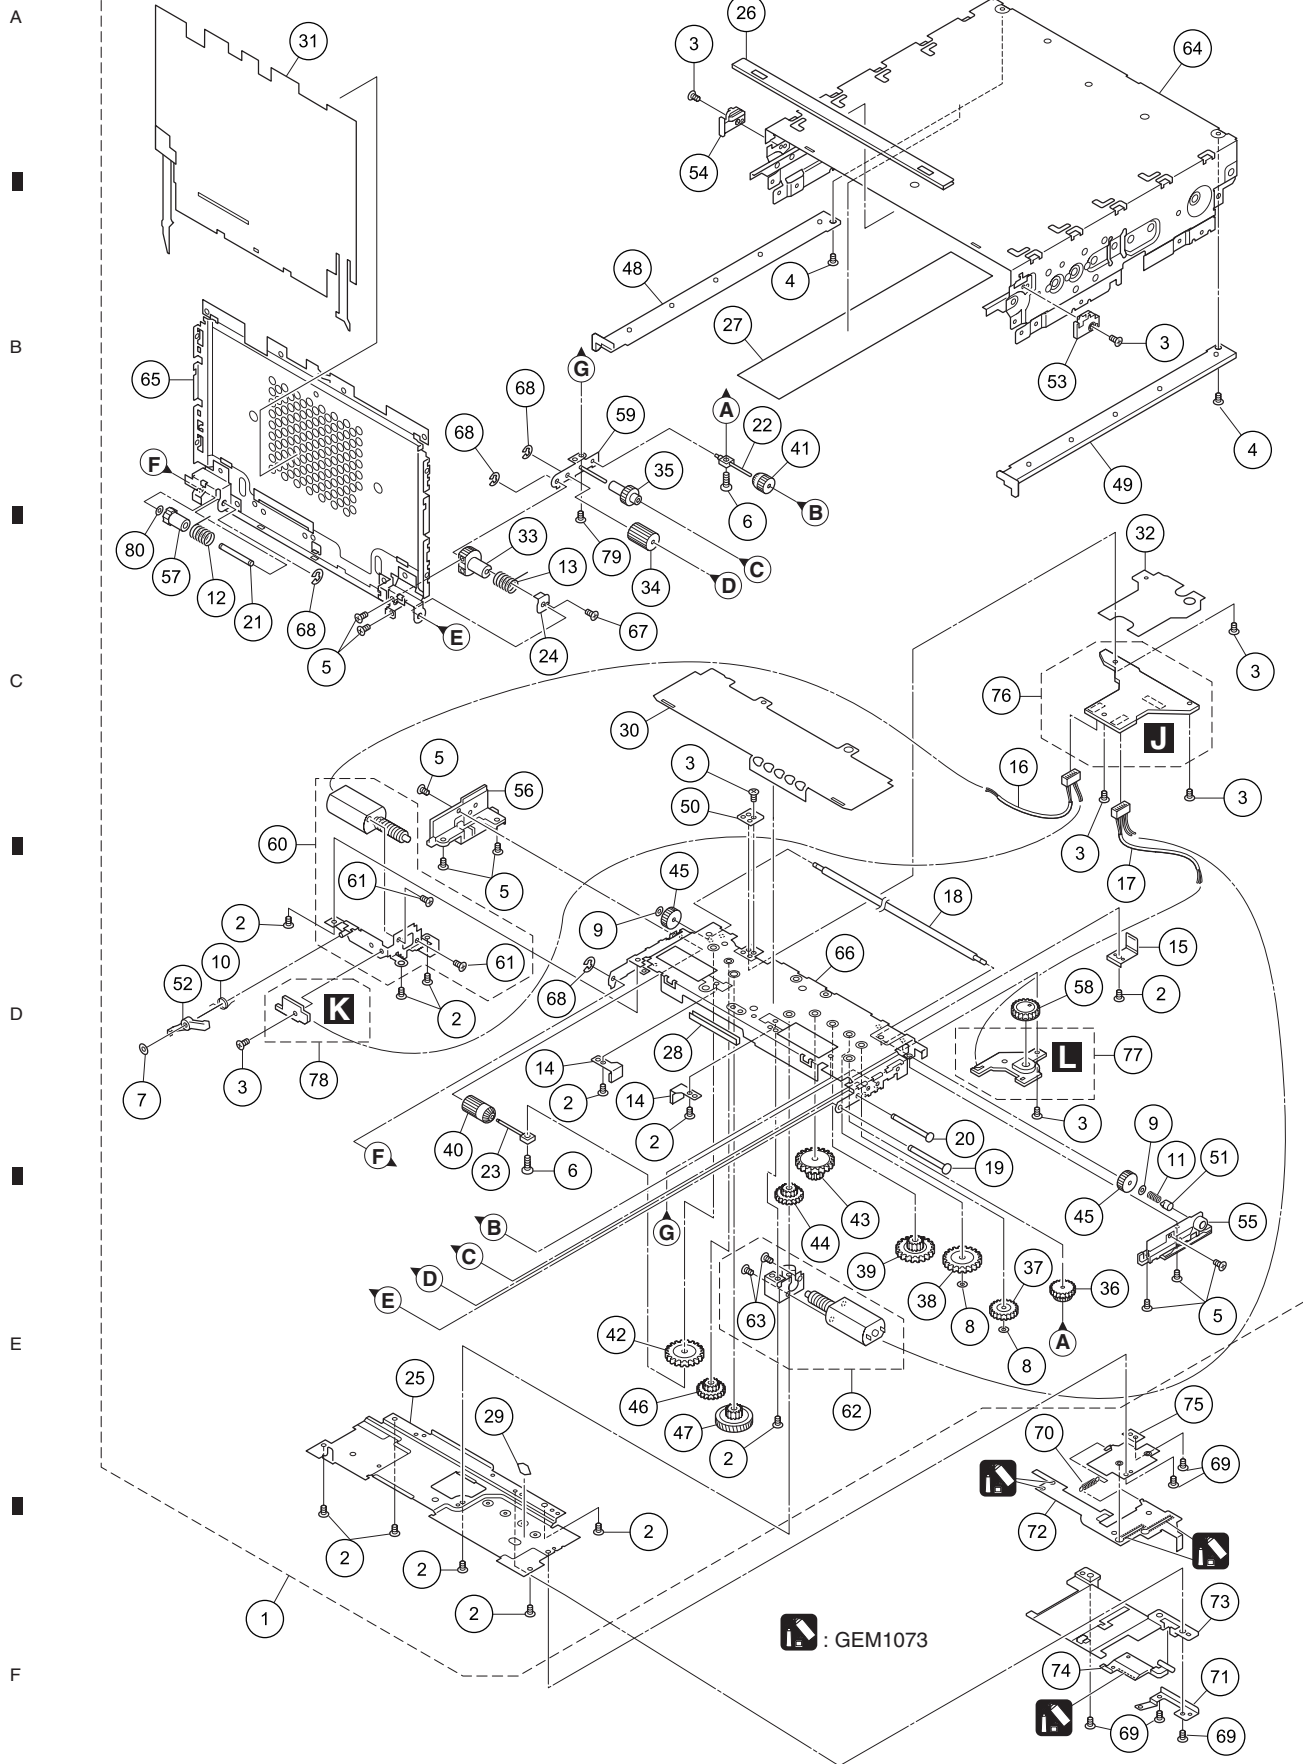

AVH-P5100DVD/XN/UC